



GLOWSTONE

TASSE

INTELLIGENTE



Manuel d'utilisation



GLOWSTONE

INTELLIGENT BRITISH DESIGN






INSTRUCTIONS SÉCURITÉ


Avant d'utiliser ce produit, lisez attentivement ces instructions. Conservez les instructions pour référence future. Ne pas utiliser cet appareil pour autre chose que l'usage auquel elle est destinée.

Ce produit est destiné à un usage domestique uniquement.

Ce produit est destiné aux boissons liquides.



Avertissement: il est dangereux pour toute personne autre que les personnes compétentes d'effectuer toute opération de service ou de réparation impliquant le retrait d'un capot offrant une protection contre l'exposition des composants électriques.



Attention: les enfants ne doivent pas utiliser cet appareil. Une surveillance étroite est nécessaire lorsque des appareils sont utilisés à proximité d'enfants.

Attention: cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou manquant d'expérience et de connaissances, à moins qu'une personne responsable de leur utilisation ne les ait supervisées ou instruites.

Sécurité. Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.



- Pour éviter tout risque d'électrocution, n'immergez pas le cordon, la fiche (adaptateur secteur) ou le socle dans de l'eau ou tout autre liquide.
- Ne laissez pas le cordon pendre du bord du plan de travail ou toucher des surfaces chaudes.
- Débranchez l'appareil de la prise de courant lorsqu'il n'est pas utilisé et avant de le nettoyer.
- Ne faites pas fonctionner un appareil avec un cordon ou une fiche endommagé (adaptateur secteur), ni après un dysfonctionnement de l'appareil, une chute ou un endommagement de quelque manière que ce soit.

Veillez appeler le service clientèle pour obtenir un remplacement:
0161646 0146

- L'utilisation d'accessoires non recommandés par le fabricant de l'appareil peut provoquer un incendie, un choc électrique ou des blessures.
- Utilisez uniquement avec la base et la fiche (adaptateur secteur fourni).
- La fiche (adaptateur secteur) est le dispositif de déconnexion et doit être débranchée de la prise secteur pour éteindre l'appareil.
- Ne retirez jamais des pièces de l'appareil telles que les pieds, les vis, etc.
- Ne touchez jamais à l'intérieur de la tasse lorsque la lumière est allumée. Attendez 5 minutes après que la lumière s'est éteinte avant de laver.
- Ne convient pas pour une utilisation au micro-ondes; Ne mettez jamais la tasse dans un micro-ondes.
- Placez-le toujours à l'envers dans le lave-vaisselle ou après le lavage à l'eau chaude.
- Ne laissez pas dans l'évier de l'eau chaude sauf à l'envers.
- N'utilisez pas le gobelet si le bas du gobelet est fissuré ou si le sceau est endommagé.
- Ne manipulez pas de piles lithium-ion endommagées ou qui fuient. Si le liquide de la batterie interne fuit, arrêtez immédiatement d'utiliser le produit et contactez le service clientèle pour obtenir de l'aide.
- Ne jamais démonter ou modifier le produit.
- Ne posez pas d'objets lourds sur ou dans la tasse, la base ou la fiche (adaptateur secteur).
- Ne jetez pas et ne laissez pas tomber le produit, ni ne l'exposez à un impact physique important.



BEFORE USING YOUR GLOWSTONE MUG

- 
- 
1. Remove all the packaging and ensure none has been left inside.
 2. Check the mug, base, plug (mains adaptor) and connecting cable after unpacking for any visual damage such as:
 - Cracks on the mug or damage to the handle.
 - Damage to the base assembly.
 - Damage to the plug (mains adaptor) or cable.
 - If you can see any damage do not use the appliance.

Place the base on a stable horizontal surface, away from walls and cabinets and high temperatures.

Do not install the base over, on, or near a cooker or other heat producing appliance.

Fully charge your mug before first use.



To charge your Glowstone smart mug, place the mug in the centre of the charging base provided.

Connect the power cables to the charging base and the plug (mains adaptor).

Insert the plug (mains adaptor) into a suitable 13 Amp mains socket and switch on the socket if it has a mains switch.

The mug will indicate it can see the charging base by flashing 3 times. (this may take a few seconds) It will then start charging your mug.

If you do not see the mug flash 3 times, it has not started charging, even if the blue light stays illuminated on the charging base). Please pick up the mug and place back on the charging base until you see it flash 3 times.

The charging base can also be plugged into your computer, car port or any suitable USB port.

To recharge fully from empty, it will take up to 5 hours.

NOTE: While using the mug, do not use the charger as a coaster as this will turn your mug off. Only put your empty mug on the charger when you want to charge the batteries.







FREQUENTLY ASKED QUESTIONS

My mug is on the charging base but it didn't flash 3 times?

If your mug hasn't flashed 3 times it is not charging. Please pick up the mug, wait 3 seconds and place it back on the base until you see it flash 3 times. If you still don't see the mug flash, it may be because your USB cable has come loose from its socket or that the batteries are completely empty (they need some charge to make the mug flash). In the latter case, leave the mug on the charger for at least 30 minutes and then see if the mug flashes when taken off and replaced back on the charger.



Top tip: Feel the bottom of the mug. If it is warm, your mug has been charging.



Can I leave my mug on the charging base for longer than 5 hours?

Yes, your Glowstone charging base will turn off when your mug is fully charged so don't worry about leaving it charging overnight or while you're out of the house. In fact, we recommend you always leave your Glowstone mug sat proudly on its charging base when not in use.

How do I know the charge level of my mug?

The brightness of your light bar when the mug is in use indicates how much charge your mug has. If the light bar is shining brightly, it's fully charged. If the light is a little dimmer, your mug has less charge and should be recharged. Over time, you will learn the brightness levels to look for.




Can I put my Glowstone mug in the dishwasher?

Yes, Glowstone mugs are built to work around your daily routine and are completely dishwasher safe. However, where possible it is better to hand wash your mug as it's made from fine bone china, and hand washing can also extend the life of the mug's battery.


Can I put my Glowstone mug in the microwave?

No. Putting your Glowstone mug in the microwave will damage it beyond repair. It will also break your microwave, or worse. Please just rely on the mug's own heating technology.

My mug didn't turn off at the last sip?



You may not have tilted it enough. Try taking a more exaggerated last sip, and it will turn off. Make sure you've had your last sip. Don't forget, you can also turn off your mug by turning it upside down or placing it back on your charging base.



Can I leave the teabag in my drink?

You can leave the teabag in if you prefer a stronger brew, but please remember to take the bag out once you've had your last sip. Otherwise, any remaining charge in the mug will cook the teabag and potentially damage your mug or worse.

My mug's light bar isn't flashing at all. What's going on?

Your light bar won't flash if your batteries are completely empty. Please leave your mug on charge for at least 30 minutes before retrying, and always allow up to 10 seconds for the mug to flash once placed back on the charging base.

For further assistance please visit www.glowstone.tech or email support@glowstone.tech

BATTERY LIFE AND RECYCLING

The battery has a limited lifespan. Battery duration will gradually decrease with repeated usage and age. Battery life also varies depending on the storage method, usage state, environment and other factors

Charge in an environment where the temperature range is between 10°C to 30°C.

Charging may not be effective when performed in other environments.

When the smart mug is not used for an extended period of time, it is recommended that you fully charge at least once a year to maintain its functionality.

These symbols are known as the 'Crossed-out wheellie bin Symbols'.



When these symbols are marked on a product/batteries, it means that the product/batteries should not be disposed of with general household waste.

Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation in ensuring the separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

CE